




# Air surface-cleaning tool

## Item No : QB-802



● The consumable parts ▲ The replacement parts ★ The non-replacement parts

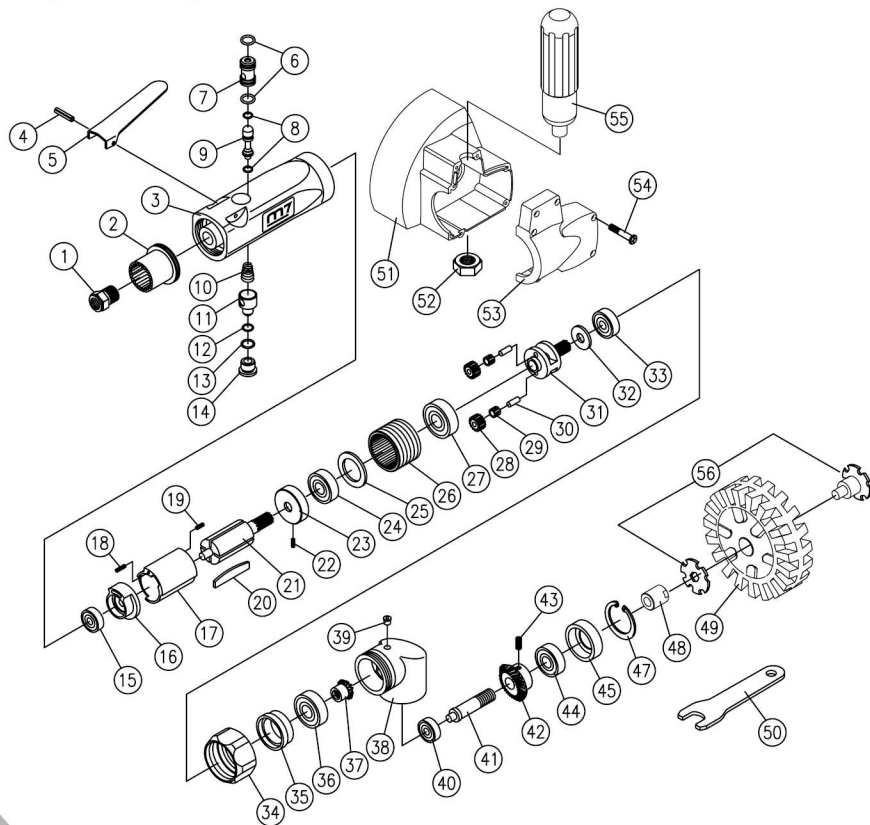

# Part List QB-802

No.	Part No.	Description	Qty	
★	01	QB-802P01	Air Inlet	1
▲	02	QB-802P02	Throttle Arbor	1
★	03	QB-802P03	Housing	1
★	04	QB-802P04	Lever Pin	1
★	05	QB-802P05	Lever	1
▲	06	QB-802T06	O-Ring (2pcs)	1 set
▲	07	QB-802P07	Valve Bushing	1
▲	08	QB-802T08	O-Ring (2pcs)	1 set
▲	09	QB-802P09	Valve Stem	1
▲	10	QB-802P10	Valve Spring	1
▲	11	QB-802P11	Air Regulator	1
▲	12	QB-802P12	O-Ring	1
▲	13	QB-802P13	O-Ring	1
★	14	QB-802P14	Throttle Valve Plug	1
▲	15	QB-802P15	Ball Bearing	1
▲	16	QB-802P16	End Plate	1
★	17	QB-802P17	Cylinder	1
★	18	QB-802P18	Spring Pin	1
★	19	QB-802P19	Spring Pin	1
●	20	QB-802T20	Rotor Blade (4pcs)	1 set
★	21	QB-802P21	Rotor	1
★	22	QB-802P22	Spring Pin	1
▲	23	QB-802P23	Front Plate	1
▲	24	QB-802P24	Ball Bearing	1
★	25	QB-802P25	Bearing Washer	1
★	26	QB-802P26	Internal Gear	1
▲	27	QB-802P27	Ball Bearing	1
●	28	QB-802T28	Planet Gear (2pcs)	1 set

No.	Part No.	Description	Qty	
●	29	QB-802T29	Needle Bearing KT477 (2pcs)	1 set
●	30	QB-802T30	Planet Pin (2pcs)	1 set
▲	31	QB-802P31	Planet Cage	1
★	32	QB-802P32	Washer	1
▲	33	QB-802P33	Ball Bearing	1
★	34	QB-802P34	Clamp Nut	1
★	35	QB-802P35	Bearing Cover	1
▲	36	QB-802P36	Ball Bearing	1
●	37	QB-802P37	Pinion	1
★	38	QB-802P38	Angle Housing	1
★	39	QB-802P39	Grease Cup	1
▲	40	QB-802P40	Ball Bearing	1
★	41	QB-802P41	Spindle	1
●	42	QB-802P42	Gear	1
▲	43	QB-802P43	Set Screw	1
▲	44	QB-802P44	Ball Bearing	1
★	45	QB-802P45	Bearing Cap	1
★	47	QB-802P47	Retaining Ring	1
★	48	QB-802P48	Adapter	1
●	49	QB-802P49	Eraser Pad	1
★	50	QB-802P50	Spanner	1
★	51	QB-802P51	Front Cover	1
★	52	QB-802P52	Hexagon Nut	1
★	53	QB-802P53	Back Cover	1
★	54	QB-802T54	Screw (6pcs)	1 set
★	55	QB-802P55	Handle	1
▲	56	QB-802T56	Adapter + Washer	1 set