




Air Screwdriver Item No : RA-402

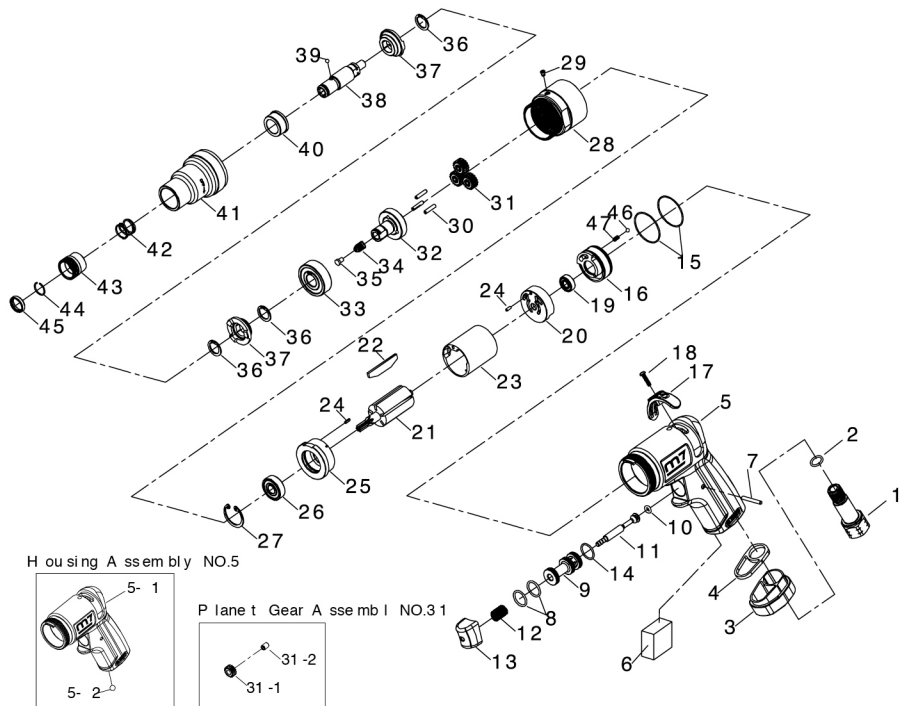

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List RA-402

	NO.	PART NO.	DESCRIPTION	Q'TY
★	1	RA-402P01	Air Inlet	1
●	2	RA-402P02	O-Ring	1
★	3	RA-402P03	Exhaust Deflector	1
★	4	RA-402P04	Washer	1
★	5	RA-402T05	Housing Assembly (5-1.5-2)	1 SET
●	6	RA-402P06	Muffler Element	1
★	7	RA-402P07	Pin	1
●	8	RA-402T08	O-Ring	1 SET
★	9	RA-402P09	Throttle Valve Seat	1
★	10	RA-402P10	O-Ring	1
★	11	RA-402P11	Throttle Valve Plunger	1
★	12	RA-402P12	Spring	1
★	13	RA-402P13	Trigger	1
★	14	RA-402P14	O-Ring	1
★	15	RA-402T15	O-Ring (2PCS)	1 SET
★	16	RA-402P16	Reverse Valve	1
★	17	RA-402P17	Reverse Valve Knob	1
★	18	RA-402P18	Screw	1
▲	19	RA-402P19	Ball Bearing	1
▲	20	RA-402P20	Rear End Plate	1
▲	21	RA-402P21	Rotor	1
●	22	RA-402T22	Rotor Blade (5PCS)	1 SET
★	23	RA-402P23	Cylinder	1
★	24	RA-402T24	Spring Pin (2PCS)	1 SET

	NO.	PART NO.	DESCRIPTION	Q'TY
▲	25	RA-402P25	Front End Plate	1
▲	26	RA-402P26	Ball Bearing	1
★	27	RA-402P27	Retainer	1
★	28	RA-402P28	Gear Housing	1
★	29	RA-402P29	Grease Fitting	1
●	30	RA-402T30	Pin (3PCS)	1 SET
●	31	RA-402T31	Planet Gear Assembly (31-1.31-2)	1 SET
▲	32	RA-402P32	Work Spinder	1
★	33	RA-402P33	Ball Bearing	1
★	34	RA-402P34	Spring	1
●	35	RA-402P35	Spindle Guide	1
●	36	RA-402P36	Retainer (3PCS)	1 SET
●	37	RA-402T37	Hammer (2PCS)	1 SET
●	38	RA-402P38	Cam Spindle	1
●	39	RA-402P39	Steel Ball	1
★	40	RA-402P40	Bushing	1
★	41	RA-402P41	Hammer Case	1
●	42	RA-402P42	Spring	1
●	43	RA-402P43	Release Sleeve	1
●	44	RA-402T44	Socket Retainer	1
●	45	RA-402P45	Washer	1
★	46	RA-402P46	Steel Ball	1
★	47	RA-402P47	Spring	1